


B.

Walk 'n' Pop™

1 YEAR +

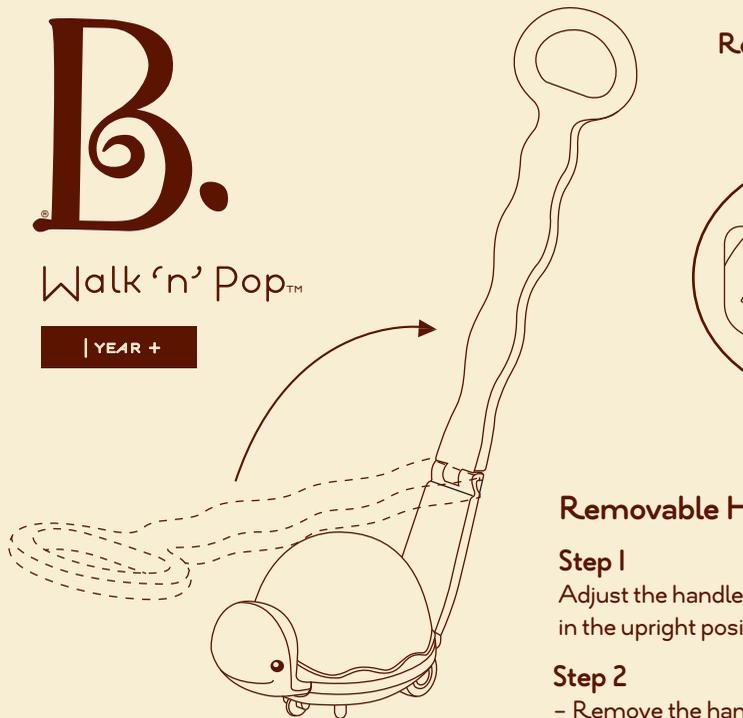


Removable Handle

Step 1


Adjust the handle in the upright position.

Step 2

- Remove the handle by squeezing both side buttons (A) and pulling gently.
- Insert handle by clipping it back into place.

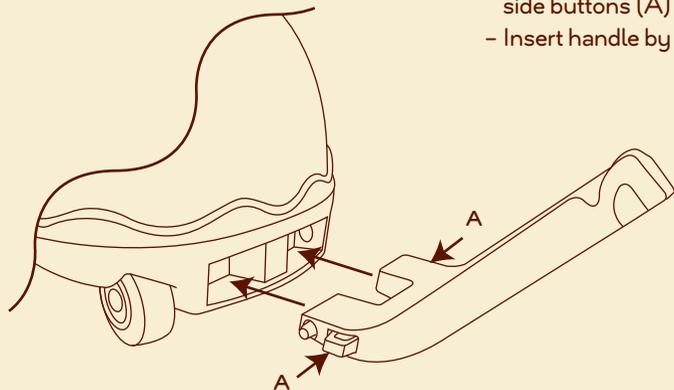

Replace 3 x AAA batteries one by one by rotating the battery module.

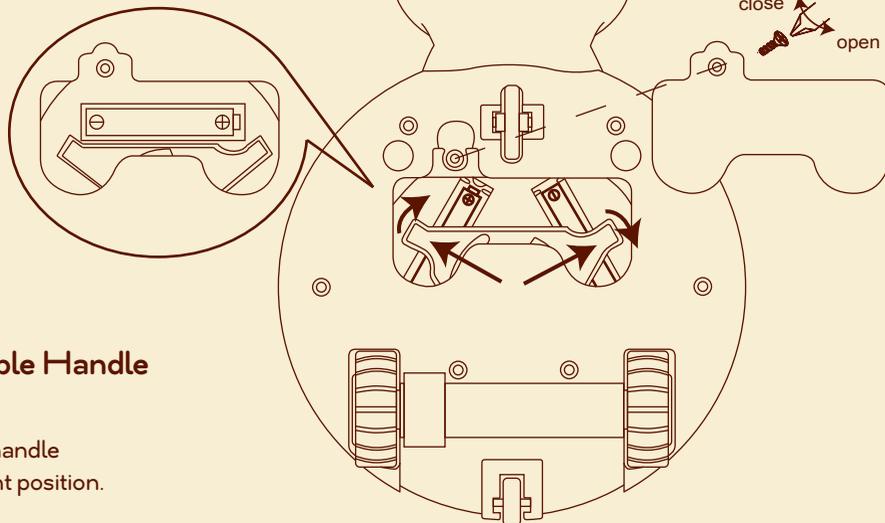

3 AAA (1.5V) BATTERIES INCLUDED

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable batteries.
- Dead batteries? Check out earth911.com to quickly find the recycling center nearest you.



100% RECYCLED
WOOD-FREE PAPER
PRINTED WITH
SOY-BASED INKS

© 2019 Maison Battat Inc.
B. and Walk 'n' Pop and
Just B. Just You. B. You
are trademarks
of Maison Battat Inc.
Manufactured for
Maison Battat Inc.
8440 Darnley Road,
Montreal, P.Q. H4T 1M4
Designed by
Maison Battat Inc.
Consumer Information Line:
1-866-665-5524

Visit us at
www.myltoys.com

Please remove all
packaging materials
before giving to children.

ATTENTION: Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

BX1647