 
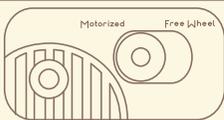


B.

The Critter Express®

2 YEARS +



A musical train,
ready to go on tour!

| | | |
|--|--|---|
|  Free Wheel mode (kid powered) Auto-off after 20 mins | Press front button  - Choo-Choo Sound - Locomotive Sound - Light | Press back button  - Plays 2 songs for 2 cycles then stops. |
| | Click the front button again to turn OFF.  | Click the back button again to turn OFF the sounds.  |
|  Motorized Mode Auto-off after 20 mins | Click front button  - Forward Motion - Choo-Choo Sound - Locomotive Sound - Light | Click back button  - Plays 2 songs for 2 cycles then stops. |
| | Click the front button again to turn OFF.  | Click the back button again to turn OFF the sounds.  |

USES 3 x AA (1.5V) size batteries.

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.

REPLACING BATTERIES

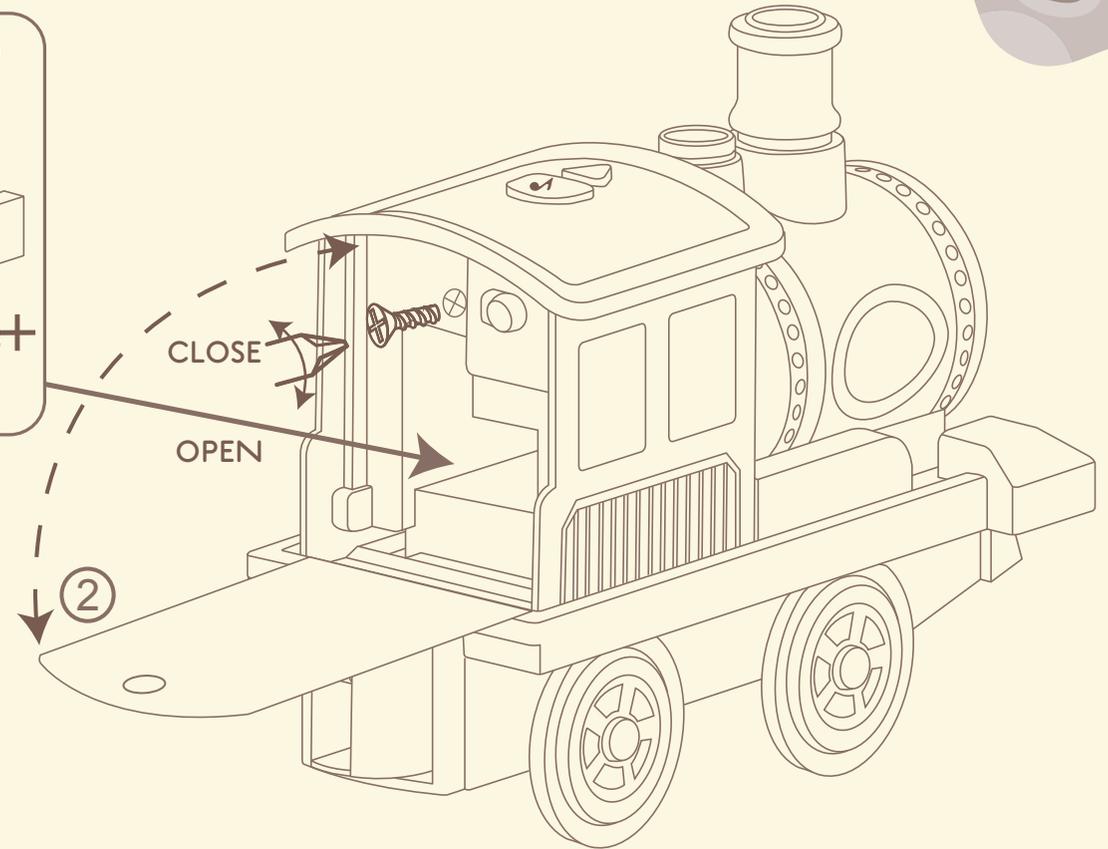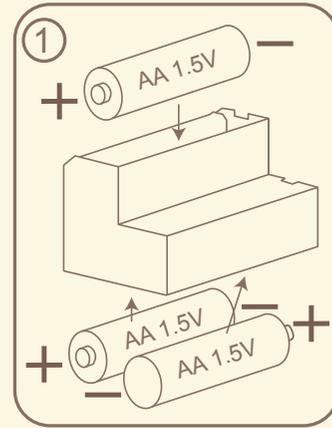

User Guide

- Keep hair out of reach of the motorized wheels to avoid entanglement.
- Should hair entanglement occur, press the front button again to stop, or shift to "Free Wheel Mode", gently pull entangled hair free.
- Ensure that the train is turned off when not in use.
- For easy assembly firmly connect train cars edge to edge, pull gently to disassemble.
- The train will automatically turn off after 20 minutes. Press the roof buttons to start again.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Please remove all packaging materials before giving to children.

© 2019 Maison Battat Inc.
B. and The Critter Express and
Just B. Just You. B. You
are registered trademarks of
Maison Battat Inc.

Manufactured for
Maison Battat Inc.
8440 Darnley Road,
Montreal, P.Q. H4T 1M4
Designed by
Maison Battat Inc.
Consumer Information Line:
1-866-665-5524

Visit us at
www.mybtoys.com

100% RECYCLED
PRINTED ON RECYCLED
SOY-BASED INKS



BX1742